spectracom

Software update instructions: SecureSync™

SecureSync Archive version 5.0.2 Update Instructions

Spectracom SecureSync Archive software upgrade instructions for the Version 5.0.2 upgrade

Important recommendation to delete the unit's logs before performing the version 5.0.2 software update Specific to the version 5.0.2 update and due to the potential for the unit's logs to be quite large, which can potentially result in the loss of some or all of the unit's configurations upon completion of the version 5.0.2 update process, we highly recommend the logs be deleted before performing the version 5.0.2 software update. The logs can be backed-up to a single bundled fine and then extracted before deleting them, if necessary. The process to easily save and delete the logs before updating the software is described further within.

Important Note about saving/restoring SecureSync configuration files

Due to fairly significant changes to the system configuration files from Archive software versions 4.x.x to versions 5.x.x, it is not recommended to perform a configuration restore with 5.x.x software installed, from a configuration save that was performed in an earlier 4.x.x software version. If a configuration restore from versions 4.x.x software is performed on a version 5.x.x time server, a 'clean' will be required to be performed via the front panel keypad thereafter to reset the NTP server to the factory default settings for the installed version.

In general, due to possible changes to configuration files from one version to another, if you wish to have a configuration backup file saved, we recommend performing a new configuration save after each new software update is performed, to replace the earlier configuration bundle. This will ensure that if a configuration restore is performed, the configs in the captured file will be identical to the ones in the NTP server.

This document provides instructions on how to upgrade the Spectracom SecureSync from Archive software versions 4.8.9, 4.8M or 4.8S (or 5.x.x) to the most current Archive software version of version 5.0.2.

Please Note: In order to upgrade the SecureSync directly to version 5.0.2, the currently installed version of Archive software needs to be **versions 4.8.9, 4.8M or 4.8S (or 5.x.x)**. If the currently installed Archive software version is version **4.8.8 or below**, please first upgrade the SecureSync to version 4.8.9 before applying the version 5.0.2 update.

The Update instructions and Update files for the version 4.8.9 update can be downloaded from our website. To download these items, please visit us at: http://www.spectracomcorp.com/Support/HowCanWeHelpYou/Software/tabid/61/Default.aspx# SecureSync.

For your information, if the current version of installed Archive software is not already known, it can be obtained from the "**Tools**" — "**Versions**" page of the SecureSync's web browser. Refer to: <u>Viewing the current versions</u>.

A) Ability to perform a software upgrade via CLI command (instead of using the web browser), such as for scripting software updates

Starting in Archive software version 4.8.8, the software update can be initiated using a CLI command (issued via telnet, SSH or the front panel Serial port), instead of using the web browser, if desired. This entails performing an FTP/SCP transfer of the software update file into the SecureSync's /home/spectracom directory and then issuing the sysupgrade CLI command to initiate the software upgrade.

Important note: When transferring the update file using either FTP or SCP (instead of uploading it using the web browser), make sure the Update file is transferred using BINARY mode. Otherwise, this file will likely be altered during the file transfer, preventing the updater from being able to extract it. The following error message will be asserted into the Update log if the Update file is altered/can't be extracted: "ERROR (-1) - Failure while unpacking Upgrade Bundle (SWUE)".

The syntax for issuing the sysupgrade command is:

- **Standard upgrade** (Such as upgrading versions 4.8.8 to 4.8.9 for example): "sysupgrade" followed by the upgrade file name (Example: *sysupgrade update489.tar.gz*).
- **Forced upgrade** (Such as downgrading versions 4.8.9 to 4.8.8 for example, but can also be used with Standard upgrades, also): "sysupgrade force" followed by the upgrade file name (Example: sysupgrade force update 489.tar.gz).
- Clean upgrade (Such as first performing a Forced upgrade from 4.8.8 to 4.8.9, for example. Then automatically resetting the NTP server back to factory default settings and deleting all log files): "sysupgrade clean" followed by the upgrade file name (Example: sysupgrade clean update489.tar.gz).


B) Desire to downgrade to a previous software version, after applying this software upgrade:

In general, due to configuration file changes incorporated between various software versions, we do not typically recommend downgrading from one version to a previous version, unless recommended by Spectracom Tech Support/Customer Service.

However, if you must downgrade to an earlier version, we recommend downgrading only to earlier version 4.8.9.

Important Note: If the software does need to be downgraded to any earlier version, the downgrade needs to be "Forced" (to override version checking that normally occurs) by selecting "Force Update" during the update process. Also, a "Restore Factory Configuration", due to incompatibilities between later and earlier configuration files, is required to be performed during the update process.

To simultaneously downgrade and 'Restore Factory Configuration', in addition to selecting the "**Update System**", and "**Force Update**" checkboxes, also select the "**Restore Factory Configuration**" checkbox, before pressing Submit (as shown in the following screenshot).

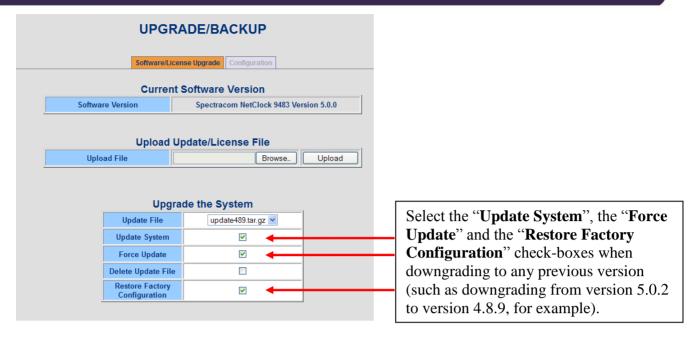

The "Restore Factory Configuration" checkbox resets all of the unit's configurations back to the factory default settings. This will remove new configurations that were added in the version 4.8.6 update (Since the web browser will be inaccessible until the "Clean" has been performed, the "Clean" command can be performed using the CLI interface - telnet, ssh or the front panel Serial port).

C) Software Update Log entries

Software update log entries, such as upgrades that have already been performed, or an error occurring during the update process, are placed in the "Update" Log (**Tools** -> **Logs** page of the web browser, **Update** tab). Please refer to this log if you have any problems with the software update process (such as if the message "**Upgrade Failure**" is displayed, for instance).

Procedure to upgrade the SecureSync from the current Archive software version of 4.8.9 (or higher) to version 5.0.2

Specific to the available PTP Option Card (Model 1204-12) if installed:

PTP Option Cards (Model 1204-12) have one Ethernet jack and should be identified with a small "12" label screened onto a corner of the metal plate of the Option Card itself).

- 1) When there are software updates that need to be automatically applied to installed PTP Option Cards during the upgrade process, the upgrade process will take an additional 5 to 7 minutes longer, for each PTP Option Card that is installed in the SecureSync.
- 2) When using a PTP Option Card in the PTP Slave Mode, the synchronization of the PTP Option Card will not be reliable while performing the upgrade process. We recommend first disabling the PTP input reference in "Reference Priority Setup" table (located on the Setup -> Reference Priority page of the web browser). In the Index (row) that lists PTP in the Time and/or PPS columns just change the "State" field of that same Index to "Disabled" and then hit Submit. You can switch it back to "Enabled" once the software upgrade has been completed.

The software upgrade process is performed using a Windows PC that is either on the same network as the SecureSync appliance, or is connected directly to the SecureSync using a network cross-over cable (In order to perform the software upgrade process, the SecureSync's web browser must be accessible from this particular PC).

The upgrade process consists of first downloading the update file from the Spectracom website and then using the SecureSync's web browser to automatically transfer this file from the PC into SecureSync (or you can also use FTP/SFTP to manually transfer the file to the "home/spectracom" directory, if desired). During the time that the file is being uploaded into SecureSync, SecureSync will remain fully functional and reachable by the network PCs.

Once the update file has been transferred into SecureSync, SecureSync is configured via the browser to perform the software update ("Upgrade System"). All current SecureSync configurations are automatically saved and restored as part of the update process. During the "Upgrade System" process, the front panel LCDs will go blank and the SecureSync will not be operational until the upgrade process has completed.

To begin, save the SecureSync update file ("**update502.tar.gz**"), which was downloaded from the Spectracom website, to an accessible directory in your local Windows machine (such as "C:/Temp", for example).

Next, open the SecureSync's web browser and Login.

Delete the unit's logs (highly recommended)

To prevent the potential that the unit's configuration may be lost during the version 5.0.2 update process, we highly recommend the logs be deleted before performing this update. Note the logs can be backed-up before deleting, if necessary (they can be bundled into a single file via the browser, and then exported to another machine using an FTP/SCP utility).

The log bundling is controlled in the "**Tools**"-> "**Upgrade/Backup**" page of the SecureSync's web browser. Click on the "**Configuration**" tab. Then, to bundle the logs, change "**Save Log Files**" to "**Enabled**" and then hit Submit. This generates a single bundled file of the logs. This file ("securesync.log") is placed in the



"home/spectracom/xfer/log/" directory. Once it has been created, you can FTP/SCP it off the box (just make sure "FTP Service" is enabled in the **Network** -> **General** page of the browser, "**Services**" tab). If you need a free FTP client, we often use CoreFTP Lite (http://www.coreftp.com/).

To delete the logs, navigate to the **Setup -> Logs** page of the browser. In the default "**General Settings**" tab, select "**Clear all Log files**" and press Submit. The logs have now been deleted.

To update the software

Then, navigate to the "Tools"→ "Upgrade/Backup" page of the browser (as shown in Figure 1).



Figure 1: Upgrade → Backup page

Ensure the "**Software Upgrade**" tab is orange (Orange indicates the tab is selected). Either click in the blank text box located next to "Upload File" or select "Browse" to be able to select the update file (Refer to Figure 2).

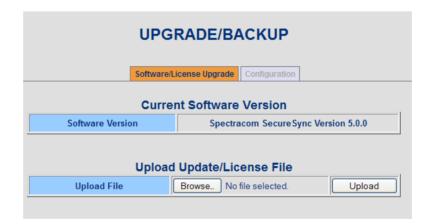


Figure 2: Software Upgrade tab on the Tools → "Upgrade/Backup" page

Use the explorer to navigate to the location of where the update file ("update502.tar.gz") was stored on the PC (such as C:/Temp) and then select it. Once the path appears in the text field (as shown in Figure 3), click the "Upload" button.



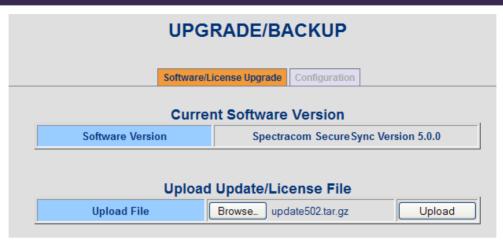


Figure 3: Upload Archive File

The file upload process may take several minutes. Once the file has been uploaded into the SecureSync, the message "The file updatexxx.tar.gz has been uploaded." (where xxx is the version) will be displayed underneath the "Upload Archive File" field (as shown in



Figure 4).



Figure 4: "Upload Successful" message

Now refer to the bottom of this page, under the title "**Upgrade the System**" (or "**Upload Update/License File**" starting in version 5.0.0):

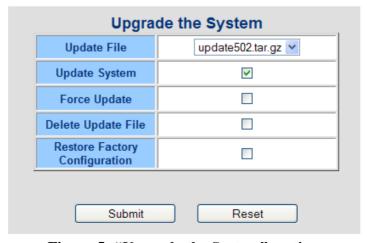


Figure 5: "Upgrade the System" section

spectracom

- 1) Ensure the correct file name ("update502.tar.gz") is selected in the box next to "Update File".
- 2) Check the box next to "<u>Update System</u>" to install the software update.

Other available checkboxes:

"Force Update" when checked, will force the software to install all packages, even if it's already at the current revision, or (for example, it's desired to install version 5.0.2, even though version 5.0.2 is already installed). The software will just reinstall over the previously installed packages.

Note: This checkbox should be selected if it's ever desired to downgrade to a previous version of Software.

"Delete the Update File" when checked, will remove the Archive file that was uploaded into the SecureSync.

Note: It will not remove the file from your PC, just from the SecureSync.

Note: If it's desired to remove the update file from the NTP server once it's been updated, note the "Delete the Update File" checkbox shouldn't be selected at the same time as the "Update System" checkbox. This process should be performed anytime after the System Update process has been completed.

"Restore Factory Configuration" when checked, will return the SecureSync to its original factory configuration.

Note: This checkbox should be selected if it's ever desired to downgrade to a previous version (such as version 4.8.9).

3) To perform the software update from an earlier software version, only the checkbox next to "Update System" should be selected. Then, hit the Submit button.

During the System Upgrade you will see an analysis screen (as shown in Figure 6).

Note: If the SecureSync has had any previous software updates applied and if any of the earlier upgrade files have not since been deleted from the SecureSync, a web browser screen may momentarily indicate the Upgrade process is "Complete". This does not affect the software update process and the analysis screen will be displayed shortly thereafter.

	UPGRADE STATUS					
	Analyzing					
Package	Old Version	New Version	Action	Status		
Application SW	-	-	-	Analyzing		
Timing SW	-	-	-	Analyzing		
Timing FPGA	-	-	-	Analyzing		
OC 1	-	-	-	Analyzing		
OC 2	-	-	-	Analyzing		
OC 3	-	-	-	Analyzing		
OC 4	-	-	-	Analyzing		
OC 5	-	-	-	Analyzing		
OC 6	-	-	-	Analyzing		

Figure 6: "Example Upgrade Status" when it first appears


Note: "OC" being displayed in the bottom rows refers to SecureSync's "Option Cards" which may or may not be installed in the SecureSync. The rows with "OC" displayed in these screenshots will likely differ from your SecureSync update screens.

UPGRADE STATUS							
	Analyzing						
Package	Old Version	New Version	Action	Status			
Application	5.0.0	5.0.2	Upgrade Needed	In Progress			
Timing FW	3.00	3.02	Upgrade Needed	In Progress			
Timing FPGA	3.00	3.02	Upgrade Needed	In Progress			
OC 1 ID FF	0000	-	No Upgrade Available	Completed			
OC 2 ID FF	0000	-	No Upgrade Available	Completed			
OC 3 ID FF	0000	-	No Upgrade Available	Completed			
OC 4 ID FF	0000	-	No Upgrade Available	Completed			
OC 5 ID FF	0000	-	No Upgrade Available	Completed			
OC 6 ID FF	0000	-	No Upgrade Available	Completed			
	<u> </u>		,				

Figure 7: Example "Upgrade Status" after the update process has begun

Note: Do not close the web browser or attempt to reboot the SecureSync unit. The installation is in progress and may take several minutes to complete.

The SecureSync will reboot itself during the update process, as shown in the following screenshot:



	UPGRADE STATUS						
	Rebooting						
Package	Old Version	New Version	Action	Status			
Application	5.0.0	5.0.2	Upgrade Needed	Processing			
Timing FW	3.00	3.02	Upgrade Needed	Processed			
Timing FPGA	3.00	3.02	Upgrade Needed	Processed			
OC 1 ID FF	0000	-	No Upgrade Available	Completed			
OC 2 ID FF	0000	-	No Upgrade Available	Completed			
OC 3 ID FF	0000	-	No Upgrade Available	Completed			
OC 4 ID FF	0000	-	No Upgrade Available	Completed			
OC 5 ID FF	0000	-	No Upgrade Available	Completed			
OC 6 ID FF	0000	-	No Upgrade Available	Completed			

Figure 8: Example display of the "Upgrade Status" while SecureSync is rebooting

Please Note: If using a DHCP assigned IP address (instead of SecureSync having a statically assigned IP address), the SecureSync's IP address may change once the update has completed (it may be reassigned a different IP address by the DHCP server). Automatic Reloading of the web page will not work if the address has been changed by the DHCP server. Therefore, a new web browser connection using the newly assigned IP address will need to be opened (Note that the following "Upgrade Status- Complete" screen won't be viewed when a DHCP address is assigned and if the DHCP server changes the IP address).

If the front panel LCD is configured to display network settings, the LCD window will show the newly assigned IP address.

When using a static-assigned IP address (or if the DHCP server did not assign a new IP address after the reboot), and as long the web browser didn't time-out during the update process (if it times-out, press the F5 key to refresh the connection), once the update is complete, the "Upgrade Status" screen will now change to "Complete".



	UPGRADE STATUS					
	Complete					
Package	Old Version	New Version	Action	Status		
Application	5.0.0	5.0.2	Upgraded	Completed		
Timing FW	3.00	3.02	Upgraded	Completed		
Timing FPGA	3.00	3.02	Upgraded	Completed		
OC 1 ID FF	0000		No Upgrade Available	Completed		
OC 2 ID FF	0000	-	No Upgrade Available	Completed		
OC 3 ID FF	0000	-	No Upgrade Available	Completed		
OC 4 ID FF	0000	-	No Upgrade Available	Completed		
OC 5 ID FF	0000	- [No Upgrade Available	Completed		
OC 6 ID FF	0000	- [No Upgrade Available	Completed		

Figure 9: Example display of the "Upgrade Status" when the upgrade process is Complete

Viewing the new software version information

Note that you will need to log into the browser using your login account information

Navigate to the "**Tools**" → "**Versions**" page of the browser. The following information should now be displayed with version 5.0.2 software installed:

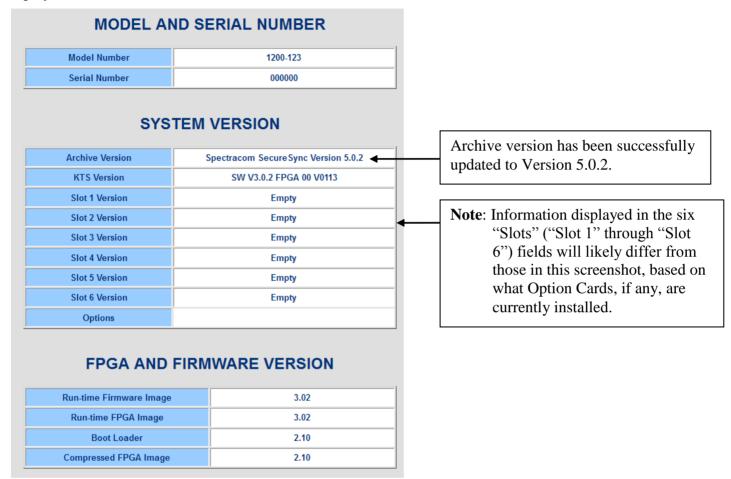


Figure 10: Example "System Version" information upon completion of the update

Note: If the Model 1204-06 Multi-port Ethernet Option Card is installed in the SecureSync and if any of its Ethernet ports are disconnected/unused (and DHCP is enabled on that network port), the time to reach NTP Stratum 1 synchronization can be significantly increased.

Before NTP can begin to synchronize, the SecureSync's power-up initializations need to first be completed. If any of the network ports of the Multi-port Ethernet Option module is configured for DHCP and a DHCP server cannot be located on that port (because the network port is either disconnected or no DHCP server can be found on that network), it will take some time for the network port to "time-out" looking for a DHCP server on that port, before the start-up initializations can continue. Configuring any disconnected Ethernet ports of the Multi-port Ethernet Option for static network settings (by disabling DHCP configuration) will help expedite the system initialization sequence, to be able to achieve faster NTP synchronization.

Refer to the SecureSync instruction manual for more information on configuring the Multi-port Ethernet Option Card's Ethernet ports for static addresses.

Viewing the current versions of software installed

To view all the current versions of all the SecureSync software packages, navigate to the "Tools" \rightharpoonup "Versions" page of the browser. You may be prompted to login. Use the same username and password you used to perform the update.



Figure 11: Tools→ Versions page



Figure 12: Version information



TECHNICAL SUPPORT

Please contact Spectracom Technical support for any additional assistance. Tech support is available via phone or email at the following locations:

USA www.spectracomcorp.com | techsupport@spectracomcorp.com | 95 Methodist Hill Dr. | Rochester, NY 14623 | +1.585.321.5800

FRANCE www.spectracom.fr | techsupport@spectracom.fr | 3 Avenue du Canada | 91974 Les Ulis, Cedex | +33 (0)1 64 53 39 80

UK www.spectracom.co.uk | techsupport@spectracom.co.uk | 6A Beechwood | Chineham Park | Basingstoke, Hampshire, RG24 8WA | 44 (0)1256 303630